

MECHANISMS - Duomatic

DUOMATIC

LEVER A - Seat height adjustment

- To increase seat height, lift Lever A when not seated.
- To lower seat height lift Lever A when seated.

LEVER B - Seat Angle Adjustment


- Lift to adjust seat angle while seated.
- Push down when desired seat angle is achieved.

LEVER C - Back Angle Adjustment

- Lift to adjust back angle while seated.
- Push lever down when desired back angle is achieved.

HAND WHEEL D - To Raise or Lower Back Support

- Turn hand wheel in an anti-clockwise direction.
- Raise or lower back to desired position.
- Turn hand wheel in clockwise direction to lock.

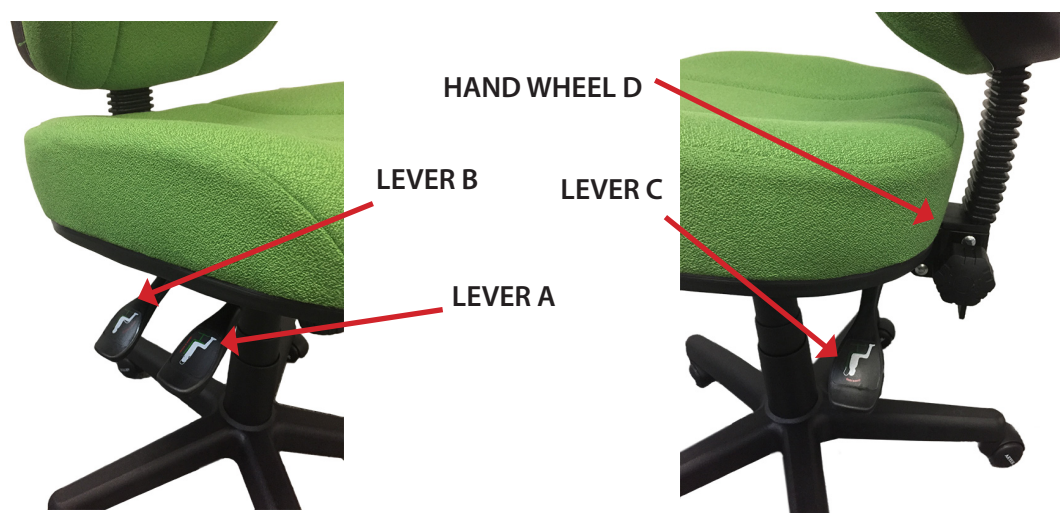

ARTEIL
Office and Healthcare Seating Specialists

Unit 2-5
95 Garling St
O'Connor WA 6163

Tel: (08) 9337 8399
Fax: (08) 9314 1553

Email: sales@arteil.com.au
www.arteil.com.au